




Buckeye Digital
Digital Cable

SETTING PARENTAL CONTROLS FOR A PROGRAM, CHANNEL, PAY PER VIEW, OR VOD PURCHASE

Select "MENU" on the remote control.

Scroll to the main menu option . Then scroll to select "SETUP" from the menu choices.

Select "LOCKS SETUP" from the setup choices.

Scroll down to select "PARENTAL CONTROL" from the menu choices.

At this time you may be prompted to enter a four digit parental code if you haven't already created one. (Note: the purchase code and parental code should be the same code.)

Enter your four digit code in the capsule where it says "PLEASE ENTER YOUR 4-DIGIT LOCKS PIN." You may block programming by rating through MOVIE RATING LOCKS, TV RATING LOCKS, ADULT TITLES and CHANNEL NUMBERS. Navigate through the rating options by using your directional pad and pressing "OK/SELECT" to lock or unlock programs by **rating**. Navigate through the channel numbers by using your directional keypad and press "OK/SELECT" to lock a specific **channel**.

Hit the "EXIT" button on your remote to return to normal TV viewing.

RESULT: You will be prompted to enter your parental/purchase code before confirming a blocked program, channel, pay per view or VOD purchase. If you have problems setting your parental control please call for assistance.



Buckeye CableSystem

NW Ohio 419.724.9800
SE Michigan 800.866.3260
Erie County 419.627.0800
buckeyecablesystem.com